
34

25

## Main Components – Early Style

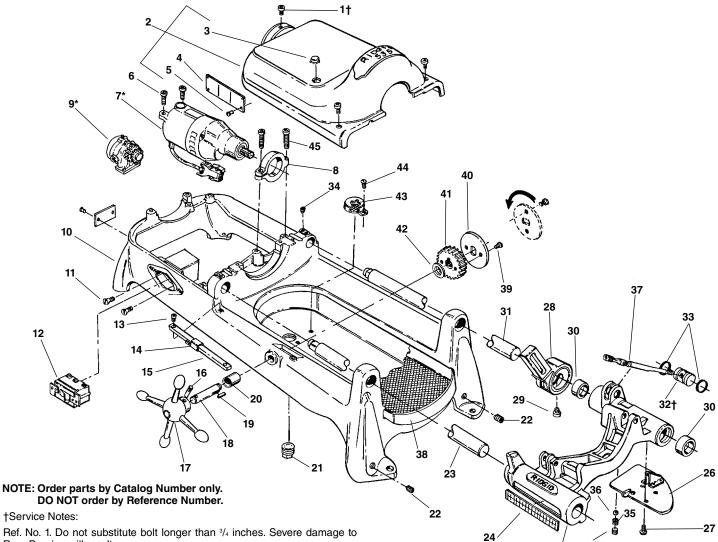


Rear Bearing will result.

Ref. No. 32. To assure proper oil flow, position pivot plug so that when spout is in up position, oil flow hole is visible in carriage slot below spout.

Ref. No.	Catalog <u>No.</u>	Description	Ref. No.	Catalog <u>No.</u>	Description
	46760	Screw <sup>3</sup> / <sup>8</sup> " - 16 x <sup>3</sup> / <sup>4</sup> " (3)	24	46370	Scale
1†	40700		24 25	46370 62057	
3		Cover (Incls. Ref. No. 3, 4, 5)	25	62057	Carriage Assy. (Includes Ref. Nos. 24, 26, 27, 28,
	89310	Plug Button	00	45105	29, 30, 34, 35, 36)
4	88690	Warning Plate	26	45195	Drip Plate
5	85920	Pop Rivet (8)	27	46270	Screw 1/4" - 20 x 1/2" Pan Head (4)
6	46745	Screw <sup>3</sup> / <sub>8</sub> " - 16 x 1 <sup>1</sup> / <sub>4</sub> " (2)	28	43690	Cutter Arm
7*	88125	Motor Model 1177, 115V	29	44930	Screw, 5/16" x 9/32"
	88165	Motor Model 2377, 230V	30	46720	Oil Seal (2)
8	43795	Motor Bracket	31	45220	Support Bar - Rear
9*	47195	Model A Oil Pump	32†	44340	Pivot Plug
10	43030	Base (Incls. Ref. No. 20, 21, 22, 44)	33	44470	O-Ring (2)
11	45280	Screw #8-32 x 5/8" Flat Head (2)	34	46800	Set Screw <sup>3</sup> / <sup>8</sup> " - 16 x <sup>3</sup> / <sup>8</sup> " (3)
12	44505	Switch	35	46680	Spring
13	45615	Screw #10-32 x 1/2" Flat Head (2)	36	46925	Ball
14	47110	Indicator Slide	37	44495	Oil Spout Assembly
15	47105	Indicator Bar	38	43355	Chip Tray
16	47165	Pin	39	46785	Screw #10-32 x 3/8"
17	46510	Handwheel	40	47120	Lock Plate
18	47115	Pinion Shaft	41	45430	Pinion
19	46930	Key <sup>3</sup> /16" Square	42	47145	Spacer
20	46540	Bushing	43	46655	Filter
21	44485	Drain Plug	44	45420	Screw #10-24 x 3/8"
22	42037	Set Screw <sup>1</sup> / <sub>2</sub> " - 13 x <sup>1</sup> / <sub>2</sub> " (4)	45	44220	Screw <sup>3</sup> / <sub>8</sub> " - 16 x 1 <sup>1</sup> / <sub>2</sub> "
23	45440	Support Bar - Front	-		
0		oupport Bail 11011			

\*Refer to Motor Model No./Refer to Model "A" Oil Pump for Component Parts


## **Main Components**

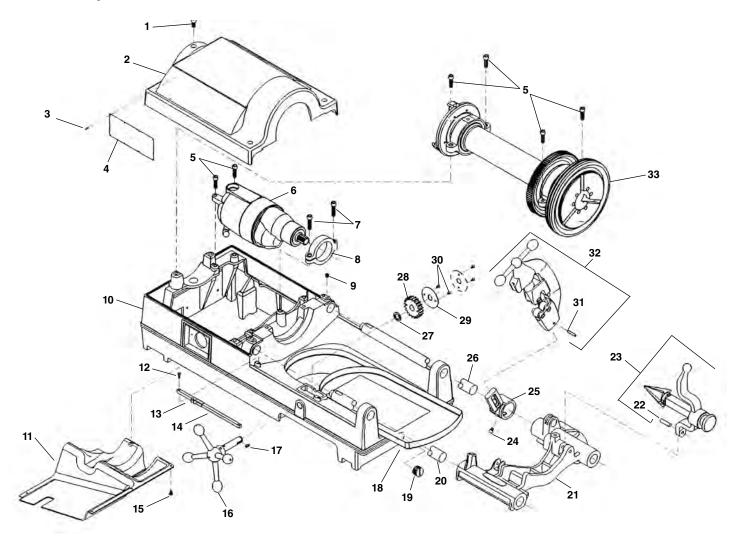


NOTE: Order parts by Catalog Number only. DO NOT order by Reference Number.

Ref. No.	Catalog <u>No.</u>	Description	Ref. <u>No.</u>	Catalog <u>No.</u>	Description
1	46760	Screw (3)	17	46930	Key <sup>3</sup> / <sub>16</sub> " Sq. x <sup>1</sup> / <sub>2</sub> "
2	62062	Top Cover	18	43355	Chip Tray
3	85920	Pop Rivet (8)	19	48337	Drain Plug
4	88690	Warning Plate	20	45440	Front Support Bar
5	46745	Screw	21	62057	Carriage Assembly
6	64447	1194 Motor, 115V, 36 RPM	22	47065	Hinge Pin
_	64452	1194 A Motor, 115V, 54 RPM	23	42365	341 Reamer Assembly
_	64457	2394 Motor, 230V, 36 RPM	24	44930	Stop Screw
7	44220	Screw (2)	25	43690	Cutter Arm
8	43795	Motor Bracket	26	45220	Rear Support Bar
9	46800	Set Screw (2)	27	47145	Spacer
10	61952	Base	28	45430	Pinion Gear
11	61947	Bottom Cover	29	47120	Lock Plate
12	45615	Screw (2)	30	46785	Screw 10 - 32 x 3/8" (2)
13	47110	Indicator Slide	31	47135	Stop Pin
14	47105	Indicator Bar	32	42390	820 Cutter Assembly
15	45420	Screw (5)	33	47585	Drive Shaft Assembly
16	46510	Handwheel			·

## **Carriage and Oiling System**

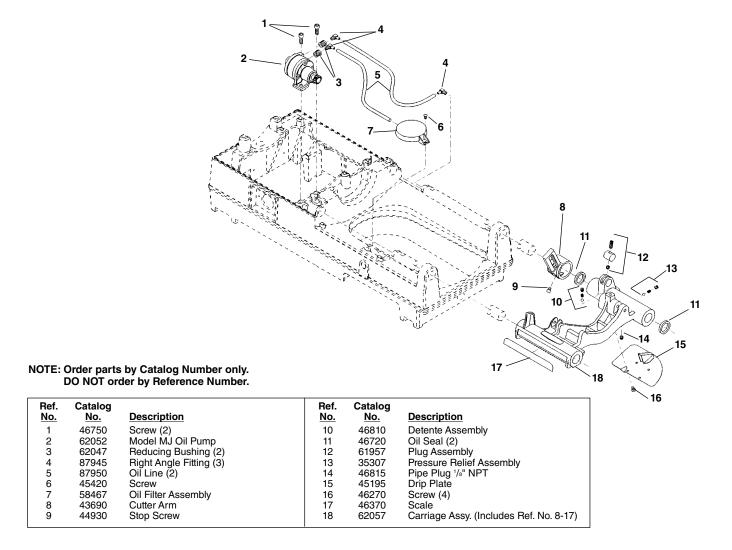

## Model MJ Oil Pump

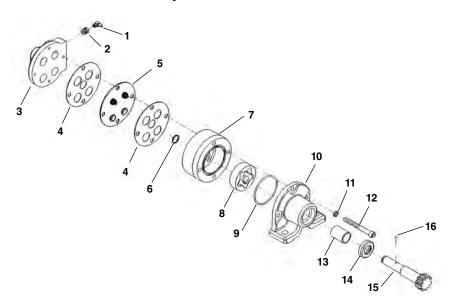

Ref. No.	Catalog No.	Description
<u>110.</u>	62052	Model MJ Oil Pump
1	87945	Right Angle Fitting (2)
2	62047	Reducing Bushing (2)
3	33442	Valve Body
4	33457	Gasket (2)
5	33452	Valve Body Assembly
6	61997	Retaining Ring
7	62002	Gerotor Housing
8	62007	Gerotor Set
9	33477	O-Ring
10	62012	Pump Body
11	45150	Lock Washer (3)
12	62017	Screw (3)
13	61972	Bushing
14	33472	Oil Seat
15	61982	Pump Shaft
16	26907	Drive Pin
17	61977	Pump Repair Kit (Includes
		Ref. No. 4-6, 9, 13, 14, and 16)