


NSTALLATION INSTRUCTIONS 1.5" Dome Drain, DR120

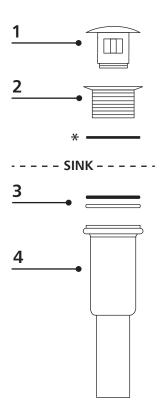

- Assemble seals (3) into the underbody (4)
- 2. Apply a small bead of 100% Silicone (non-water based) to the underside of the waste (2)
- Locate the underbody (4) and seals (3) central to the underside of the vessel sink hole
- Locate the waste (2) central to the top side of the vessel sink hole
- 5. Assemble decorative cover (1) as per diagram, hand tighten + 1/4 turn.

Note: Rubber washer is only used for glass sinks.

Remove all excess silicone around the drain after the drain has been installed