


**R70100 / R70100-WS (WITH STOPS)
SINGLE HANDLE FLOOR MOUNT
FREESTANDING TUB FILLER ROUGH-IN**

**R70100 / R70100-WS (CON TOPES)
PIEZAS PARA LAS TUBERIAS INTERNAS
PARA LLENAR BANERAS (TINAS)
NO-EMPOTRADAS EN EL PISO.**




**ROBINET BRUT DE PLANCHER AUTOPORTEUR
A UN TROU POUR BAIGNOIRE R70100 / R70100-
WS (avec robinets d'arrêt)**

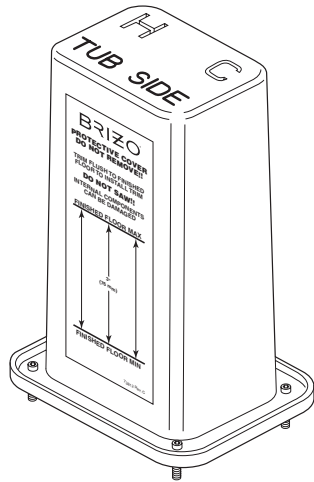

RP74816
Test Plugs
Tapones de prueba
Bouchons d'essai



RP74812
O-Rings
Anillos "O"
Joints toriques

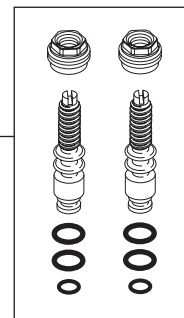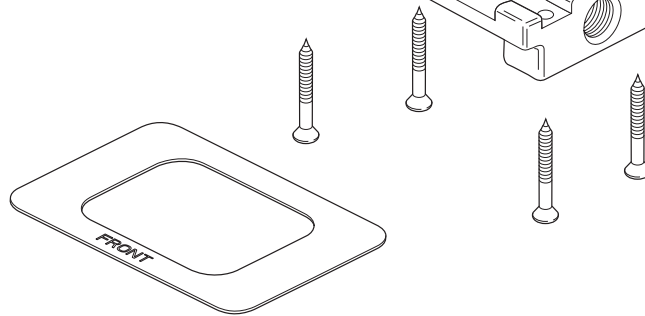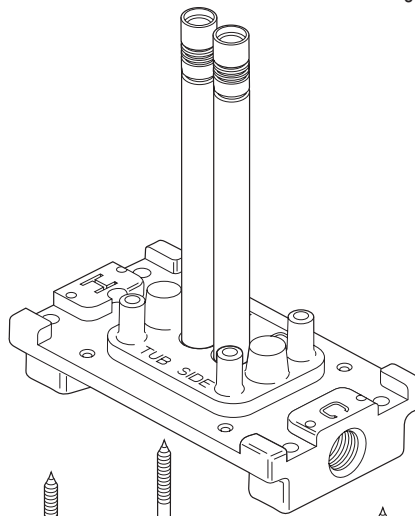

RP50366
Stops
Topes
Robinets d'arrêt