
DURAGUARD™ WALL GUARDS

FOR USE WITH MUSTEE MOP SERVICE BASINS

INSTALLATION NOTE: If installing into concrete block or if holes do not fall on support member (i.e. wall stud), the use of wall anchors (not provided) is recommended.

CORNER INSTALLATION

- 1. Hold panels in place and mark hole locations on wall. Drill 3/32" pilot holes for #10-1"(PN-67.801) screws.
- 2. Run a bead of silicone sealant (not included) on each wall near the corner and set corner bracket in place. Apply a second bead of sealant to the front of the corner bracket to help prevent leaks. Using the twelve (12) screws provided, secure the panels to the wall. See **FIGURE 1(a & b)**.
- 3. Apply a bead of silicone sealant around panels to prevent leaks.

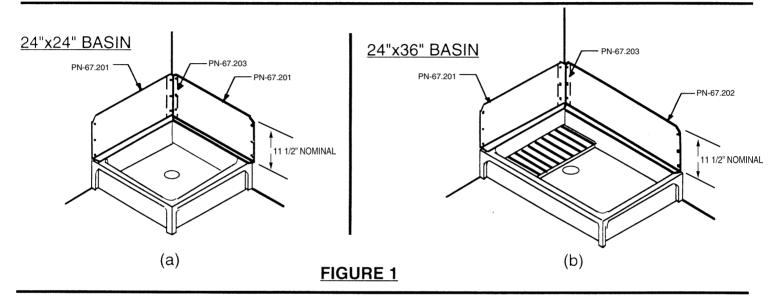

NON-CORNER INSTALLATION

- 1. Hold panel in place and mark hole locations on wall. Drill 3/32" pilot holes for #10-1" (PN-67.801) screws.
- 2. Using six (6) of the screws provided, secure the panel to the wall. See FIGURE 2(a, b & c).
- 3. Apply a bead of silicone sealant around panels to prevent leaks.

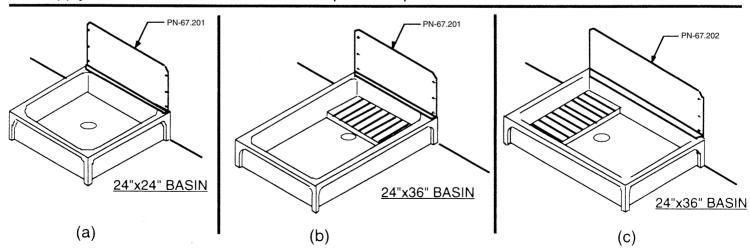



FIGURE 2

"CLOSET" INSTALLATION

NOTE: A THREE PANEL "CLOSET" INSTALLATION REQUIRES THE USE OF TWO (2) DURAGUARD™ UNITS. REFER TO THE CHART AND FIGURES BELOW TO DETERMINE WHICH UNITS ARE NEEDED!

MOP BASIN SIZE	REFERENCE FIGURE	REQUIRED UNITS
24" x 24"	FIGURE 3(a)	1- PN 67.2424 & 1- PN 67.24C
24" x 36"	FIGURE 3(b) FIGURE 3(c)	1- PN 67.2436 & 1- PN 67.36C 1- PN 67.2424 & 1- PN 67.36C
		-or- 1- PN 67.2436 & 1- PN 67.24C

- 1. Hold panels in place and mark hole locations on wall. Drill 3/32" pilot holes for #10-1"(PN-67.801) screws.
- 2. Run a bead of silicone sealant on each wall near the corners and set corner brackets in place. Apply a second bead of sealant to the front of each corner bracket to help prevent leaks. Using eighteen (18) of the screws provided, secure the panels to the wall. See **FIGURE 3(a,b &c)**.
- 3. Apply a bead of silicone sealant around panels to prevent leaks.

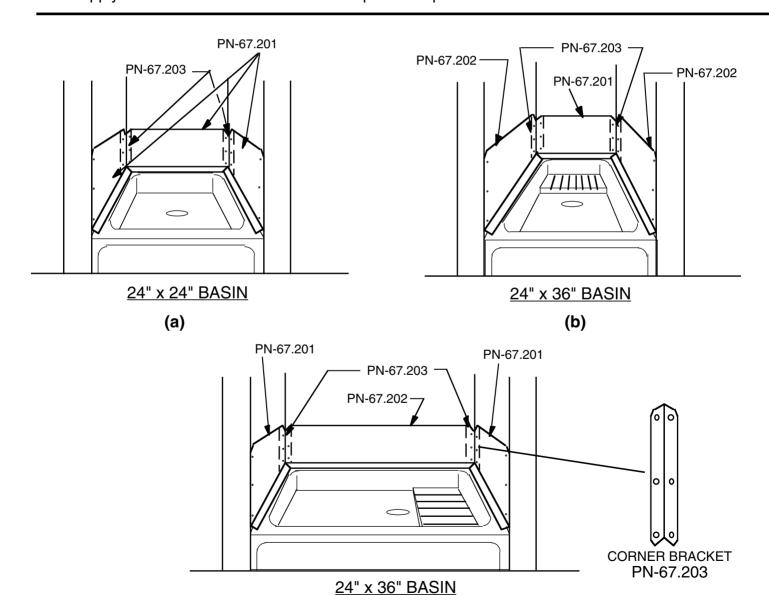

(c) FIGURE 3