Ambria Technical Specification Soap & Tumbler Holder DN3866 & DN3844


Stock Numbers:

- q DN3866SCC Wall Mounted Soap Holder Chrome & Satin Chrome Finish
- q DN3844SCC Wall Mounted Toothbrush Holder Chrome & Satin Chrome Finish
- DN3866CH Wall Mounted
 Soap Holder
 Polished Chrome Finish
- DN3844CH Wall Mounted Toothbrush Holder Polished Chrome Finish
- DN3866SNV Wall Mounted
 Soap Holder
 Satin Nickel & Ivory Finish
- ON3844SNV Wall Mounted Toothbrush Holder Satin Nickel & Ivory Finish

Materials:

Soap and Tumbler Holders are die cast from highest quality zinc. Soap dish and tumbler are made from class.

Dimensions:

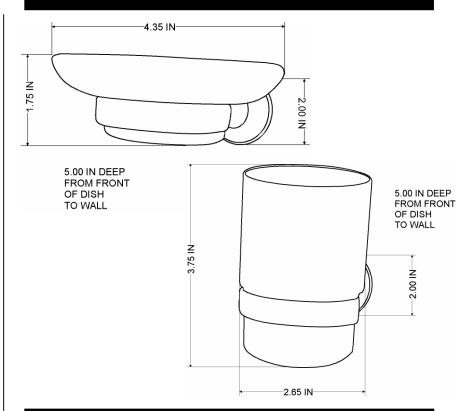

Installation Instructions:

- 1. Mounting hardware is included in the package.
- 2. Position the assembled unit on the wall where desired.
- 3. Lightly mark the outline of each base.
- 4. Center a mounting bracket within each base outline.
- 5. Mark the hole locations of each mounting bracket.
- 6. Attach each mounting bracket to the wall, using the mounting bracket screws with the optional plastic wall anchors provided. Note: Mounting into wood studs or the use of toggle bolts is recommended whenever possible.
- 7. Mount each base on the corresponding mounting bracket. Check and make sure that the base set screw hole(s) are facing down. Assemble a setscrew to each base. Use the Allen wrench included in hardware kit to tighten each setscrew and secure the assembly to the mounting bracket(s).

Cleaning Instructions:

To preserve the fine finish of this product, clean only with a soft damp cloth. Dry well. Do not use commercial or abrasive cleaners.

Stock Number:_____Soap Dish & Tumbler
By CSI Bath Furnishings



25300 AL MOEN DRIVE • NORTH OLMSTED, OH 44070 (800) 321-8809 • FAX: (800) 848-6636 • INTERNATIONAL: (440) 962-2000 •

FAX: (440) 962-2726 CUSTOMER SERVICE (USA): 800-882-0116

©Copyright CSI Bath Furnishing Division of Moen 02/22/01