

# Inspirations™ Technical Specification

Wall Mounted Toothbrush & Soap Holder

YR4744 & YR4766


## Stock Numbers:

- q YR4744CH – WM Toothbrush Holder  
Chrome Finish, Wholesale Packaging
- q YR4766CH – WM Soap Holder  
Chrome Finish, Wholesale Packaging
- q YR4744PB – WM Toothbrush Holder  
Polished Brass Finish, Wholesale Packaging
- q YR4766PB – WM Soap Holder  
Polished Brass Finish, Wholesale Packaging
- q YR4744PM – WM Toothbrush Holder  
Platinum Finish, Wholesale Packaging
- q YR4766PM – WM Soap Holder  
Platinum Finish, Wholesale Packaging
- q YR4744ST – WM Toothbrush Holder  
Satine Finish, Wholesale Packaging
- q YR4766ST – WM Soap Holder  
Satine Finish, Wholesale Packaging

## Materials:

Toothbrush and Soap Holders are constructed of zinc except for accent rings and trays that are brass.

## Dimensions:

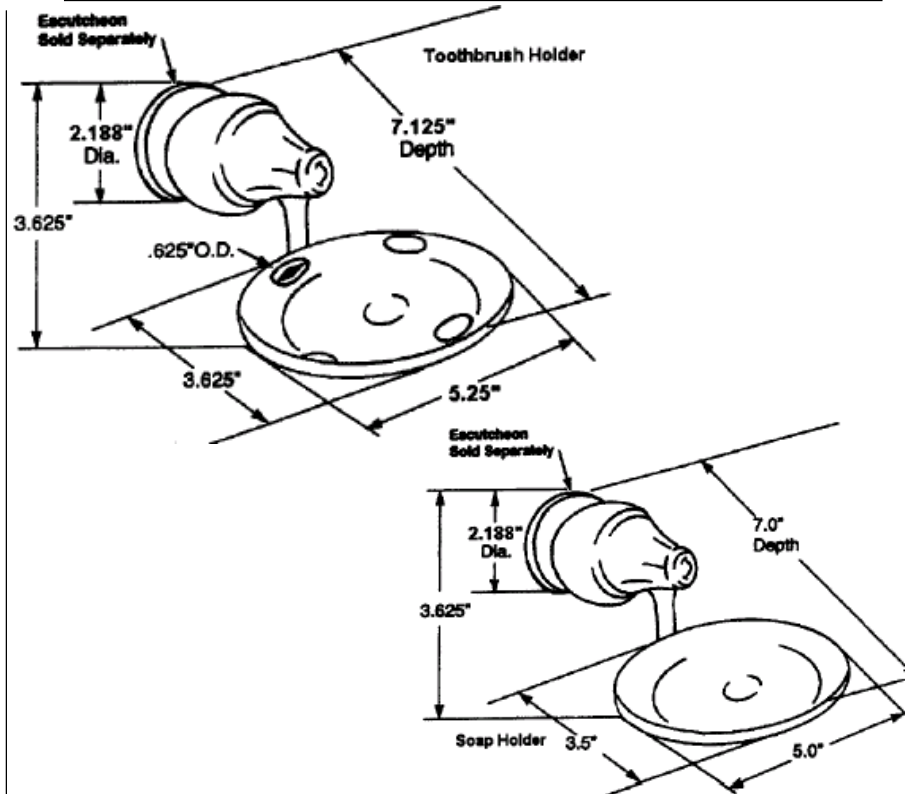

## Installation Instructions:

1. Position the assembled unit on the wall where desired.
2. Lightly mark the outline of the base.
3. Remove the mounting bracket from back of the fixture by loosening the setscrew with the allen wrench provided.
4. Center the mounting bracket in the outline. Make sure the arrow is pointing up and the setscrew hole is facing down.
5. Mark the hole locations.
6. Attach the bracket to the wall. Mounting into wood studs is recommended whenever possible.
7. Mount the base on the bracket, followed by the end cap. Tighten the setscrew to secure the assembly to the bracket.

## Cleaning Instructions:

To preserve the fine finish of this product, clean only with a soft damp cloth. Dry well. Do not use commercial or abrasive cleaners.

Stock Number: \_\_\_\_\_ Wall Mounted Toothbrush / Soap Holder  
By CSI Bath Furnishings



25300 AL MOEN DRIVE • NORTH OLMSTED, OH 44070 (800) 321-8809 •  
FAX: (800) 848-6636 • INTERNATIONAL: (440) 962-2000 •  
FAX: (440) 962-2726 CUSTOMER SERVICE (USA): 800-882-0116  
©Copyright CSI Bath Furnishing Division of Moen 02/22/01

Literature #BA1011